


StreetRap

Application Requirements:

- The surface must be absolutely dry, clean and in reasonably good condition.
- StreetRap** must be applied in dry weather to a dry surface at temperatures above 50°F (10°C) on days the temperature is expected to rise to at least 70°F (21°C). Heat helps the adhesive flow to the rough surface to create a better bond. Do not attempt to apply graphics late in the day when the temperature is expected to cool down.
- The rougher the surface the less contact the adhesive will have and the less chance your graphic has for success.

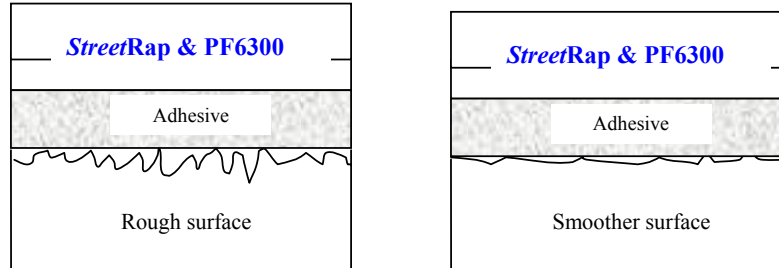

Adhesive contact is much better on smoother surfaces!

- To clean the surface, use a brush or stiff bristle broom to remove dirt and dust, sand and gravel or other loose contaminants. Do not use water or cleaners which will cause the surface to become wet.
- Bridge graphics over seams if needed; do not force the graphic down into the seam.
- Once aligned, pull back 1-2 inches of the liner to expose the adhesive to align and start the application. Remove 6 - 10 inches of liner at a time and using a firm squeegee or a firm, short bristle brush with very firm pressure, forcing the adhesive down into the surface. Continue with 6 - 10 inches at a time to eliminate air bubble, complete the application.
- Once complete go back over all edges again to make sure they are in full contact to the surface.
- If possible trim sharp corners to a rounded radius to help minimize edge lifting.
- On rougher surfaces use heat and pressure to conform at least 1" of the graphic edge down into the surface.
- If needed, use a 1" overlap to seam the graphic. Do not have multiply layers of overlap on your graphic. This creates excessively high levels which may result in trips, falls and injuries. Stagger your overlaps as necessary.

LIMITATIONS:

- StreetRap** is **not** intended to be used as a conformable wall wrapping film.
- StreetRap** used on sealed concrete will result in a **permanent application** and will not be easily removed. Always test first in an inconspicuous area.
- StreetRap** on varnished surfaces and soft walls like stucco or drywall will **damage** the surface upon removal. Always test first in an inconspicuous area.
- StreetRap** is **not** designed for use with vehicular traffic. Short term applications, like for special events or parades that last a couple days are acceptable. However, at the end of the special event immediately remove the graphic before regular traffic resumes.

IMPORTANT NOTICE: The information given and the recommendations made herein are based on our research and are believed to be accurate, but no guarantee of their accuracy or completeness is made. In every case, user shall determine before using any product in full scale production, or in any way, whether such product is suitable for user's intended use for their particular purpose under their own operating conditions. User assumes all risk and liability whatsoever in connection with their use of any product. The products discussed herein are sold without any warranty as to merchantability or fitness for a particular purpose, or any other warranty, express or implied. No representative of ours has any authority to waive or change the foregoing provisions, and no statement or recommendation not contained herein shall have any force of effect unless in an agreement signed by the officers of seller and manufacturer. Nothing contained herein shall be construed to imply the nonexistence of any relevant patents or to constitute a permission, inducement or recommendation to practice any invention covered by any patent without authority from the owner of the patent. The following is made in lieu of all warranties, express or implied: Seller's and manufacturer's only obligation shall be to replace or credit such quantity of the product proved to be defective at its discretion.

TM Trademark of Morgan Adhesives Company.

© Registered Trademark of Morgan Adhesives Company.
www.MACtac.com



FLOOR DECAL INSTALLATION


RWFLR48x144L-01

KEYS TO A GOOD INSTALLATION



- 1.) Day before: Use broom and shop vac to remove loose dirt. Mop floor thoroughly 24 hours in advance of installation.
- 2.) Day of Installation: Repeat with broom and shop vac

THIS IS A TWO to THREE PERSON JOB!


Keep Floor Decal TAUNT and Do Not let it touch the floor before the other installer Pushes the Floor Decal to the Floor.

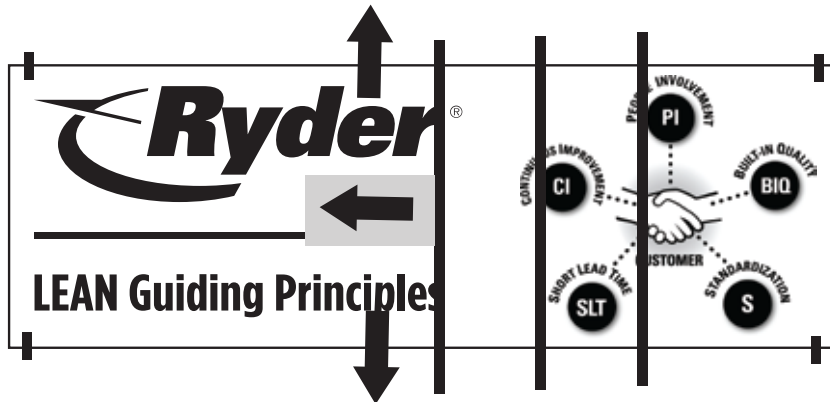

FLOOR AREA

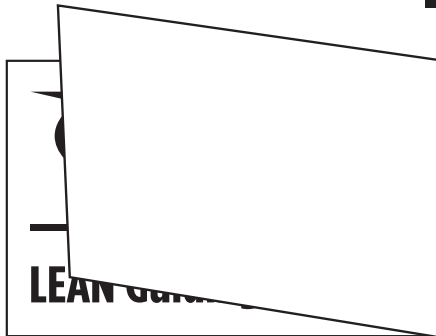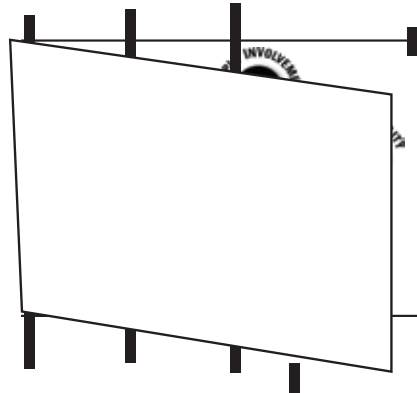

FLOOR AREA

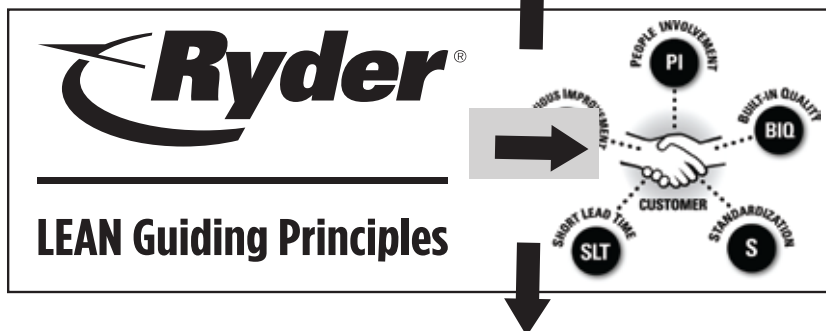

1.) Tape Floor Decal in place in all 4 corners. The tape through the middle of the panel and two other long pieces to keep right side in place as you install the Left side of the Floor Decal.

2.) Remove tape from Left side of Floor Decal. Fold Decal back to taped middle, remove wax paper from Decal laying panel with adhesive UP over taped line. Cut the Wax Paper with a pair of scissors. Both people should hold the adhesive side of Decal off floor and walk back to the Left. One person will hold the Decal off the floor with both hands as the second person goes back to the middle to brush the Decal in place. Start with one stroke through the middle toward the Left approx. 2'. Then stroke from the middle to the outside. Repeat to the end of the Left side of Floor Decal.

3.) Remove tape from RIGHT side of Floor Decal. Fold Decal back to taped middle, remove wax paper from Decal laying panel with adhesive UP over taped line. Remove wax paper from Right side. Both people should hold the adhesive side of Decal off floor and walk back to the Right. One person will hold the Decal off the floor with both hands as the second person goes back to the middle to brush the Decal in place. Start with one stroke through the middle toward the Right approx. 2'. Then stroke from the middle to the outside. Repeat to the end of the Right side of Floor Decal.

4.) Inspect ALL edges; Press Firmly Down